













## Procedure

### Software Version

Note: Not all machines will require a software update.

- 1 Verify the software revision on your machine.
- 2 Turn the key switch to ground control and pull out the red Emergency Stop button to the on position.
- 3 Read and record the software version displayed on the LCD screen.

Software Version \_\_\_\_\_

Note: Refer to the following chart to determine if the machine software requires updating.

Model	Software Version
GR, GRC, QS	3.2.1

Note: Models with a software version listed is the minimum requirement to support Access Manager and does not require an immediate software update.

**▲** Genie recommends updating the machine software to receive the latest updates and features available. Refer to the Genie Firmware website.

Note: Models with a lower revision level must update the system software. Refer to *Firmware Site Download*.

### Firmware Site Download

- 1 Access the firmware website address below:  
<https://www.genielift.com/en/support/firmware>
- 2 From the drop-down menu, select the model that is appropriate for your machine.
- 3 Update the software using the appropriate instructions for your machine.

### Access Manager Activation


- 1 Navigate to the Options menu on the machine and verify Lift Connect is selected.
- 2 To complete activation of your Access Manager keypad please contact the Lift Connect team.

mailto:

[AWP.LiftConnectSubscriptions@terex.com](mailto:AWP.LiftConnectSubscriptions@terex.com)

# Drilling Diagram

GR, QS models

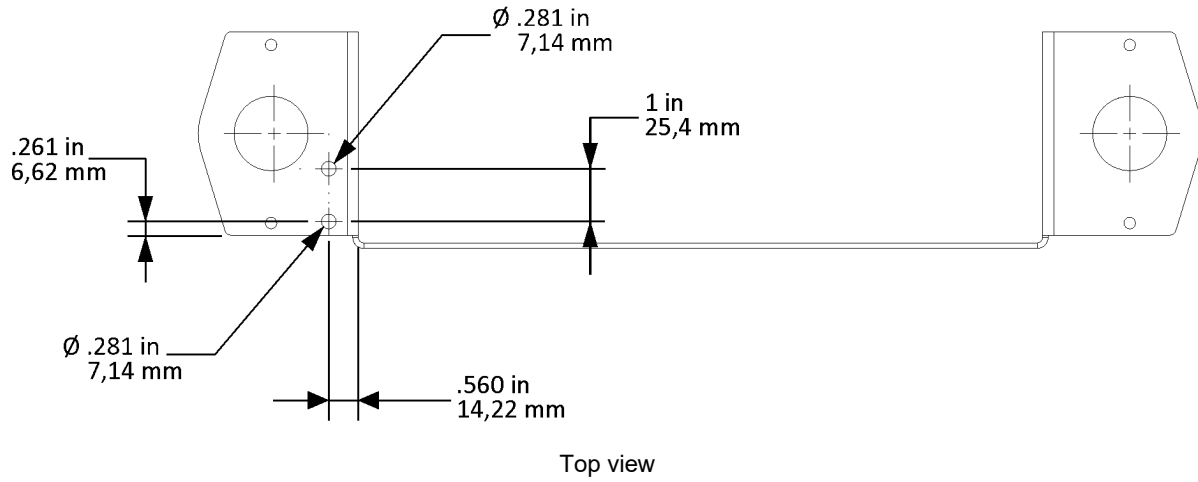



# Drilling Diagram

## GRC models

