

STAY ALERT AT HEIGHTS

GENIE® LIFT GUARD™ CONTACT ALARM



FEATURES



Simple Field
Installation



Free Movement
Zone



Easy Reset
After Activation

BENEFITS

- ⌚ When activation cable is tripped, notifications will continue until system is reset by clicking the activation cable back into place.
- ⌚ System is easy to install & repair if damaged.
- ⌚ Free movement zone may allow for operator mobility.

LEGACY MACHINES		
PART NUMBER*	CONTROL SYSTEM	AVAILABLE ON
1279134GT	ALC1000	Z-80+, includes all booms 80' and over except S-80/S-85
1279135GT	NON-ALC1000	S-40, Z-45, S-80
1279136GT	For machines with 4'-5' platforms	Z-30, Z-34, Z-40/23 N & Z-40/23 N RJ
CURRENT PRODUCTION*		
PART NUMBER*	CONTROL SYSTEM	AVAILABLE ON
1313927GT	ALC1000	SX-105 XC, SX-125 XC, SX-135 XC, SX-150, SX-180, Z-80/60, ZX-135/70
1313998GT	ALC500	Z-45 FE, Z-45 DC, Z-45 XC, Z-51/30J RT, Z-62/40
1313259GT	ALC600	S-40 XC, S-45 XC, S-60 J, S-60 XC, S-65 XC, S-80 J, S-80 XC, S-85 XC
1313999GT	Hardwired	Z-30/20 N (No OPS), Z-34/22 IC (No OPS), Z-34/22 N (No OPS)
1314000GT	Plus+1	Z-33/18 (No OPS), Z-40/23N (No OPS), Z-45 FE (No OPS), Z-45 DC (No OPS), Z-60

*Verify correct part numbers for your machine serial number on [Parts.GenieLift.com](https://parts.genielift.com).

Genie®

QUALITY^{BY} DESIGN

LEARN MORE AT [PARTS.GENIELIFT.COM](https://parts.genielift.com)