



Phone 817-485-6073
Fax 817-428-6008
USA & CANADA Toll Free 800-541-1797

4101 Garland Drive
Fort Worth, TX 76117-1706

March 1, 2016

User Guide for Slip-On-Forks Telehandler Buckets

Star Industries models 1400B, 1406B, 1408B, and 1408HC Universal Fit (slip-on forks style) buckets are designed for use on extendible reach forklifts (telehandlers).

When using the bucket care must be taken not to exceed the lift capacity of the telehandler. Be sure to include the weight of the bucket in with the weight of the load then refer to the forklift's load chart for maximum load capacities at various boom positions.

The bucket must be properly installed by inserting 48" long forks fully into the fork pockets. Both locking pins must then be installed behind the heel of each fork and those pins secured with hairpins. In addition the safety chain must wrap around a strong part of the carriage and hooked back on to itself with the locking grab hook.

The bucket is designed for loading loose material only and is not recommend for digging. It is ideal for trash clean up and backfill operations. It is not designed and must not be used to transport personnel.

Always carry the load low and make sure you are on solid level ground before elevating.

The load capacity of the bucket is only limited to the load capacity of the telehandler.

The empty weight of the bucket is on the product label attached to the bucket however should the product labels be missing the empty weights are shown below.

1400B – 555 lbs. 1406B - 740 lbs. 1408B – 740 lbs. 1408BHC – 900 lbs.

Always refer to the telehandlers operator's manual for proper operation of the telehandler and any special instructions are limitation on the use buckets.