

# TECH TIPS

Service Call:

**Unit will not lift. Auxiliary Battery  
Light Illuminated on the Lower Control  
Box Panel**

Tools Needed:

Phillips head screwdriver

Model:

**AWP/IWP**



## Tech Tips Safety Rules



### **Danger**

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury. Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

### **Do Not Perform Maintenance Unless:**

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
  - manufacturer's instructions and safety rules
  - employer's safety rules and worksite regulations
  - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this tech tip is a supplement to the service manual. Consult the appropriate service manual of your machine for safety rules and hazards.

## Step 1

Using the Phillips Head screw driver, open the lower control box panel. In the lower left hand corner of the box, locate the black plastic box attached to the back cover.



## Step 2

Remove the 2 Phillips Head screws that attach the black plastic box to the back cover and turn the black box around to assist in the removal of the batteries. Remove and replace the 8 AA batteries that are contained inside the black box.



## Step 3

Reinstall the black plastic box with the new batteries and test the unit per the operators manual.

## Step 4