

# TECH TIPS

Service Call:

**How to release the brakes**

Tools Needed:

None

Model:

**Slab Scissors**



## Tech Tips Safety Rules



### **Danger**

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury. Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

### **Do Not Perform Maintenance Unless:**


- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
  - manufacturer's instructions and safety rules
  - employer's safety rules and worksite regulations
  - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this tech tip is a supplement to the service manual. Consult the appropriate service manual of your machine for safety rules and hazards.

## Step 1

Make sure wheels are chocked.

Locate brake release manifold at rear of machine.

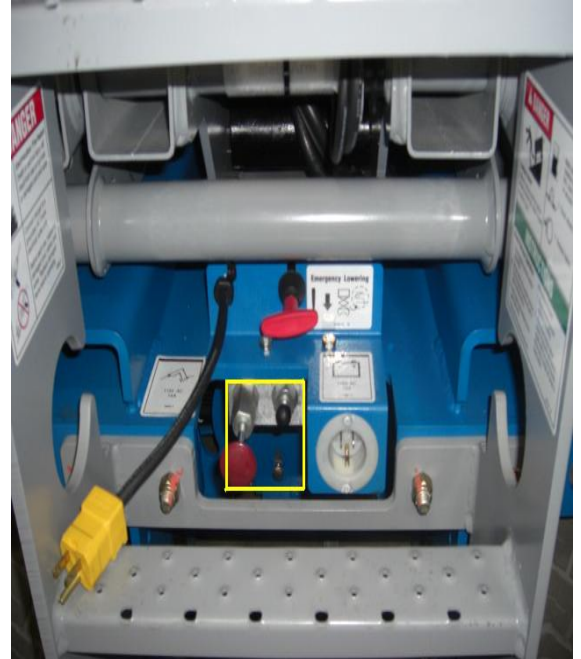

## Step 2

Units with round or dome shaped knob: press knob in

Units with round coin shaped knob: turn knob CCW



## Step 3

Pump red knob to release brakes.



## Step 4

To reactivate brakes on units with round or dome shaped knob drive unit with wheels chocked and the black knob will pop back out.

To reactivate brakes on units with round coin shaped knob rotate knob CW then drive the unit with wheels chocked.

The brake should now be back in the normal operating position.

