

TECH TIPS

Service Call:

**boom down slow
or fault 24 in platform box**

Tools Needed:

n/a

Model:

s80/85#8000 & above



Tech Tips Safety Rules



Danger

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury. Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.


Do Not Perform Maintenance Unless:

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
 - manufacturer's instructions and safety rules
 - employer's safety rules and worksite regulations
 - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this tech tip is a supplement to the service manual. Consult the appropriate service manual of your machine for safety rules and hazards.

Step 1

Go to platform.
Push red emergency button off at the platform.
Move and hold drive enable toggle switch to the right pull up on emergency button.
When the alarm sounds, release drive enable switch.
Momentarily activate the drive enable 12 times.
There should be a pause and the alarm should sound 12 times.
Now go to step 2.

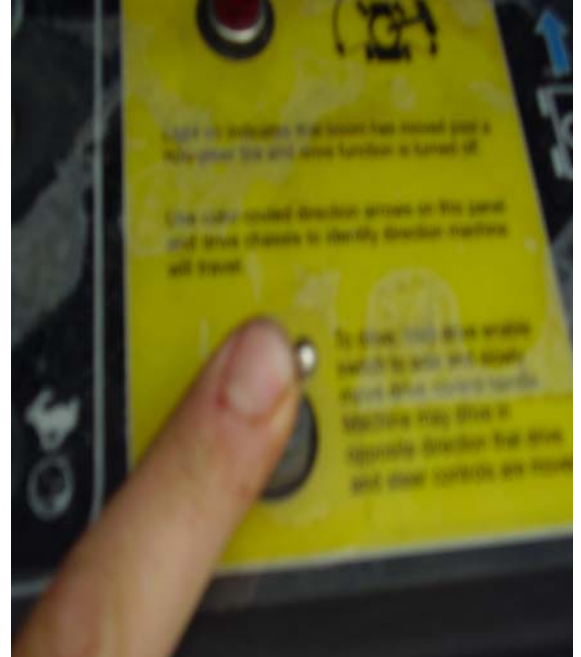

Step 2

Start the engine from platform and press down on foot switch.
Move joystick back to fully stow the boom.
Once the boom is in the stowed position, move the drive enable switch to the right one time.
Now move the joystick forward to raise the boom to its highest position, then move the drive enable toggle to the right one time.
The alarm should sound indicating that the setting have been saved.
If functions are still slow call the service department at 1-800-536-1800

