

TECH TIPS

Service Call:

**Adjusting the sequencing cables on
the AWP/IWP/CWP and GR products.**

Tools Needed:

7/16" open end wrench

Pliers

Model:

AWP/IWP/GR



Tech Tips Safety Rules



Danger

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury. Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

Do Not Perform Maintenance Unless:

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
 - manufacturer's instructions and safety rules
 - employer's safety rules and worksite regulations
 - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this tech tip is a supplement to the service manual. Consult the appropriate service manual of your machine for safety rules and hazards.

TECH TIPS



Step 1

Fully Lower platform.



Step 2


Check for proper deflection of each sequencing cable by inspecting the spring compression. The spring is located between the nylock nut and upper sequencing bracket.

TECH TIPS




Step 3

Compress the spring to 15/16"/2.4 cm turning the nut clockwise to increase spring compression counterclockwise to decrease spring compression.

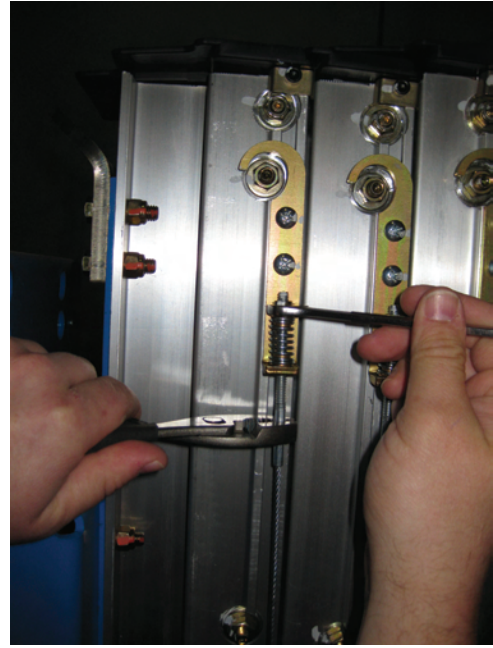

Step 4

Confirm the spring measurement of each sequencing cable.

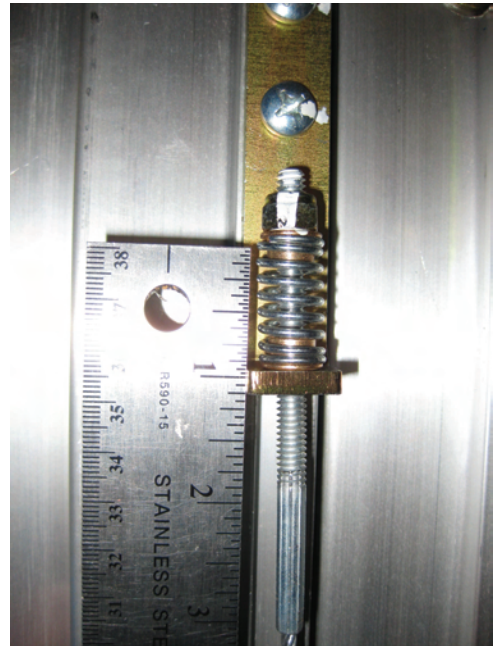

TECH TIPS



Step 5

Raise and lower the platform through three complete cycles and confirm the spring compression.

Step 6

Repeat the adjustment for each cable as required. Please contact the Genie Industries Service Dept at 1-800-536-1800 if you should have any questions